 




GATOR BASE SCREWS

TDS Revision Date (dd/mm/yyyy): 09/02/2026



TECHNICAL DATA SHEET

Update:

February 9, 2026

Make sure you have an updated technical data sheet on hand.

Canada and U.S. dial **1-855-847-7767** or (450) 624-1611

Description:

Fastening [Gator Edge](#) with the **GATOR BASE SCREW** through the [Gator Base](#) reinforces the outside perimeter, creating a strong lateral support. **GATOR BASE SCREWS** are a required component on any [Gator Base](#) install.


Features:

- Use with all [Gator Base](#) installation
- Use with all the Gator Edges: [Rigid and Flex](#), [Mini](#) and [Tile](#)
- Reinforces the outside perimeter
- Creates a strong lateral support
- Locking all components into one
- Use **GATOR BASE SCREWS** to fasten [Gator Edge](#) to [Gator Base](#)

For use on:

Use **GATOR BASE SCREWS** to fasten [Gator Edge](#) to [Gator Base](#). Locks all components into one

Installation instructions:

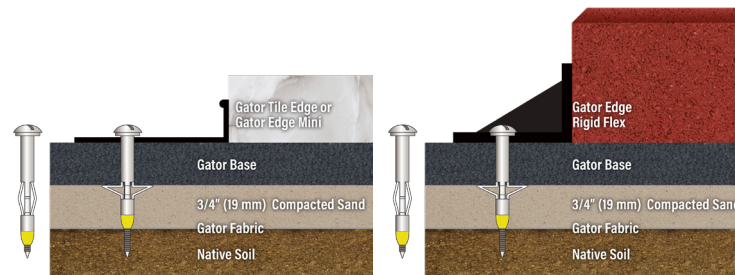

STEP 1 It can be screwed either before or after the paving installation.

STEP 2 Ensure [Gator Edges](#) are installed firmly against the paving units.
The [Gator Base](#) must be 6" (15 cm) wider on all sides than the paved area.

STEP 3 When using **GATOR BASE SCREWS**, install one screw at every second hole and every junction of the edges to ensure continuous lateral support.



Packaging:

Product

Gator Base Screws

Units per Package

1/8 LD HOLLOW ANCHOR (50 UNITS)

Package per Box

20